Publication No. 5B6348
21APR95

Installation Instructions for the ANTI-STATIC KIT on the *Kodak X-Omat* 480 RA PROCESSOR

Purpose: To reduce the static charge on film fed through the EXIT ROLLERS.

Installation Time:	one hour
Parts Requirements:	KIT #5B6525
Parts Status:	Available 1 July 95 from Service Parts Management

HEALTH SCIENCES DIVISION

© Eastman Kodak Company

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

Parts Requirements: KIT 5B6525

Quantity	Part No.	Description
1	779051	WASHER - FLAT, small inner diamater (i.d.)
1	852614	WASHER - FLAT, large inner diameter (i.d.)
1	852620	NUT
1	852971	SCREW - #6-32 x 0.750
1	853096	WASHER - LOCK
1	5B6393	BRUSH - ANTI-STATIC, assembly

Installing the ANTI-STATIC Kit

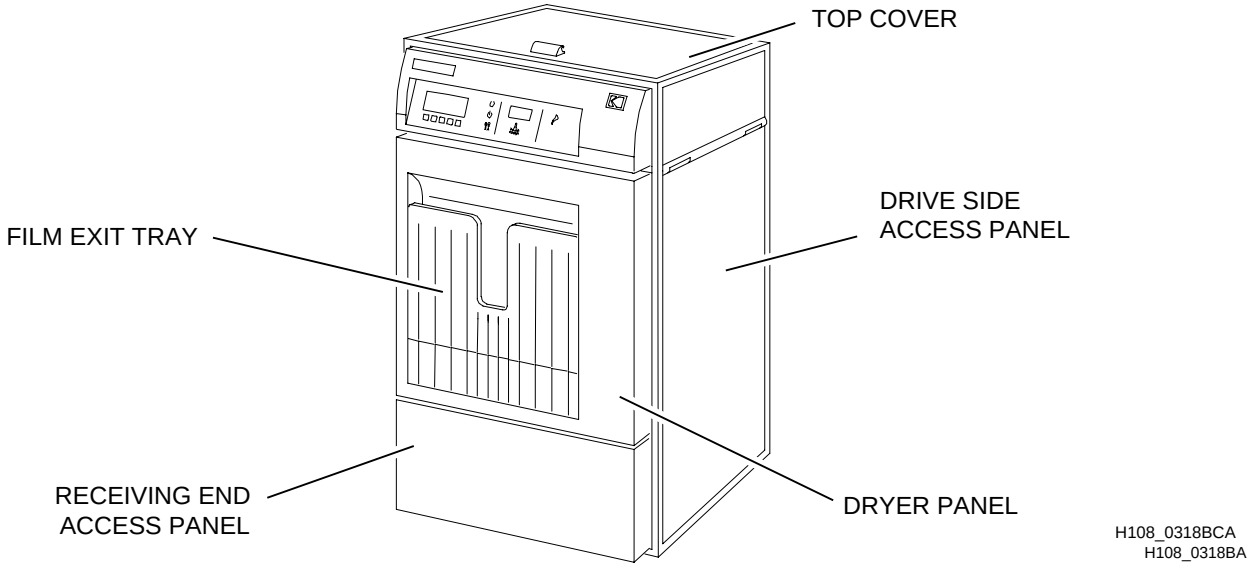

Warning

Dangerous voltage.

[1] Disconnect the main power to the PROCESSOR.

[2] De-energize the PROCESSOR.

[3] Remove the

- DRYER PANEL
- RECEIVING END ACCESS PANEL

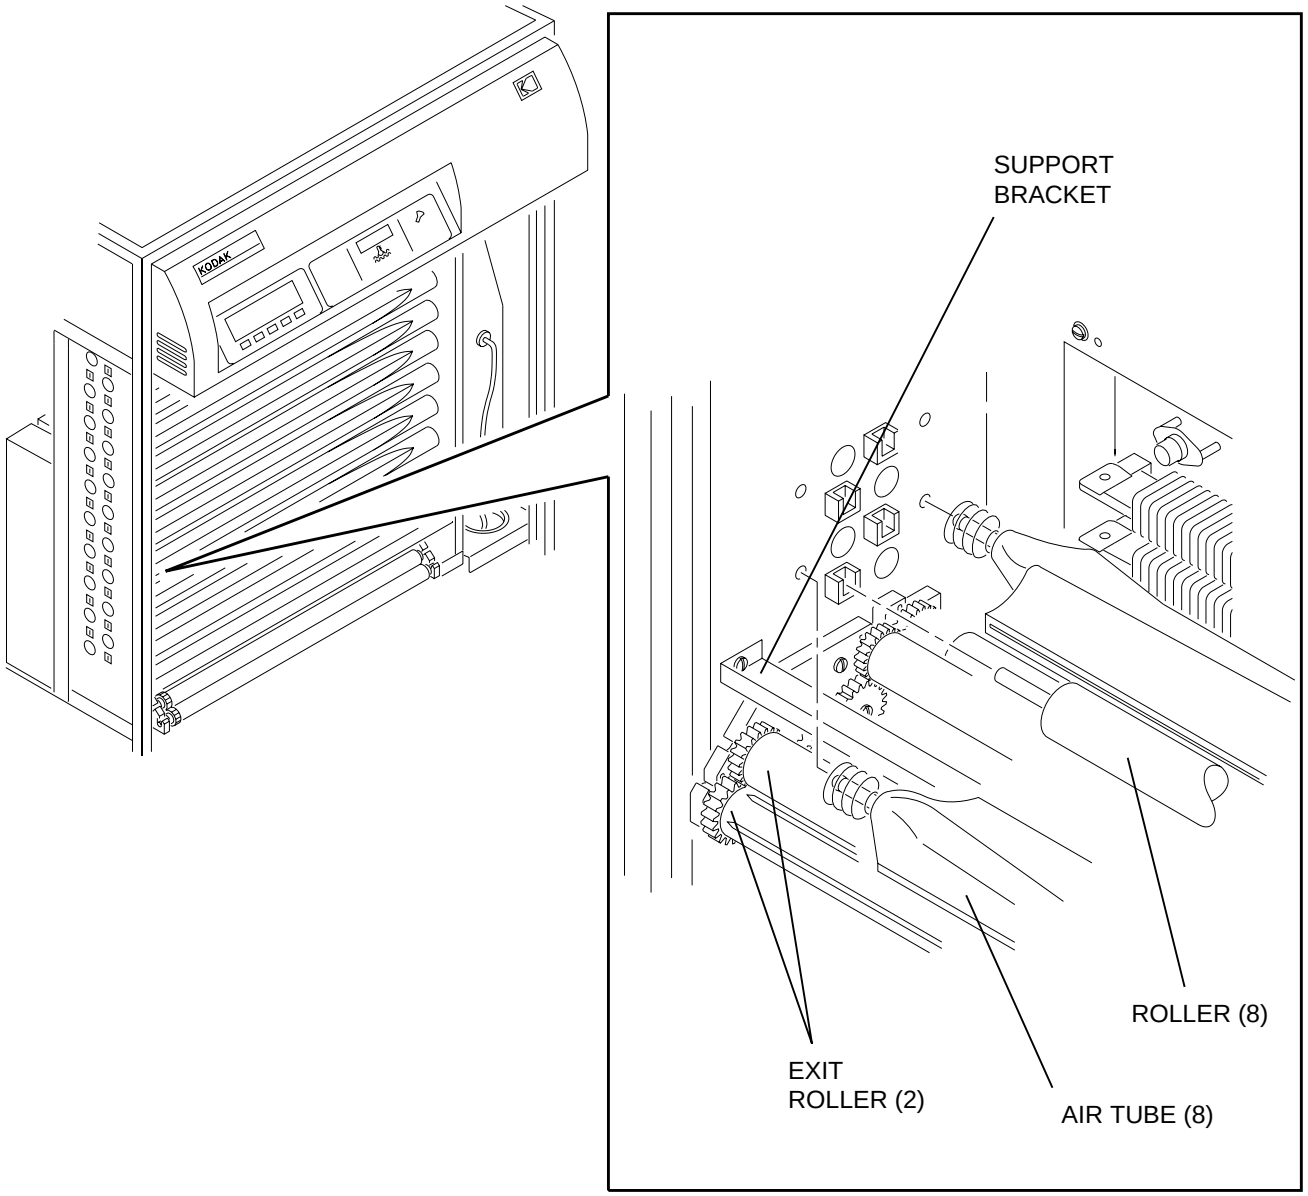

H108_0373DCA
H108_0373DA

[4] Remove the

- 8 bottom AIR TUBES
- 8 bottom ROLLERS

[5] Remove the 2 EXIT ROLLERS.

[6] Remove the SUPPORT BRACKET.

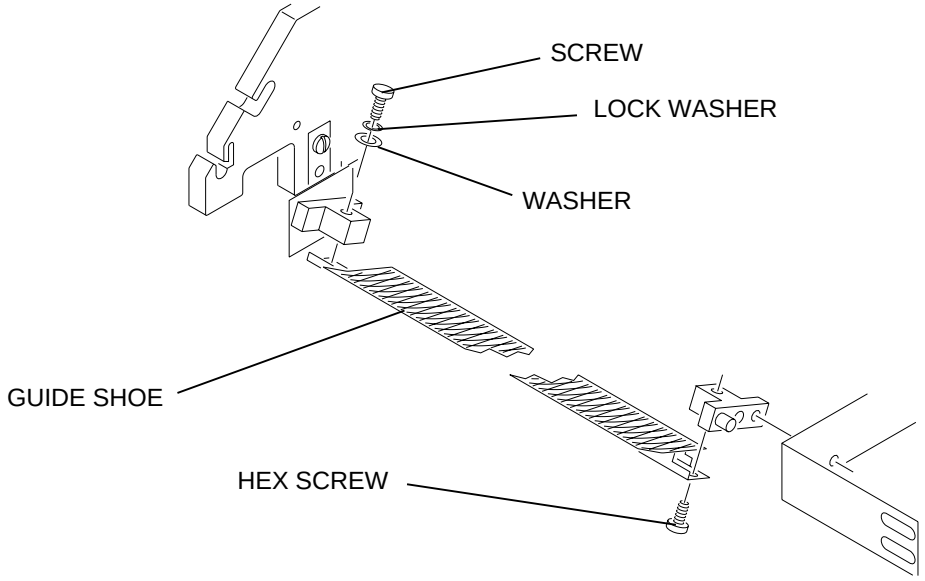

H108_0374BCA
H108_0374BA

Caution

- Do **not** remove the HEX SCREW until Step 9.
- Be careful **not** to bend the GUIDE SHOE in the following steps.

[7] Remove and discard the SCREW, LOCK WASHER, and WASHER from the GUIDE SHOE.

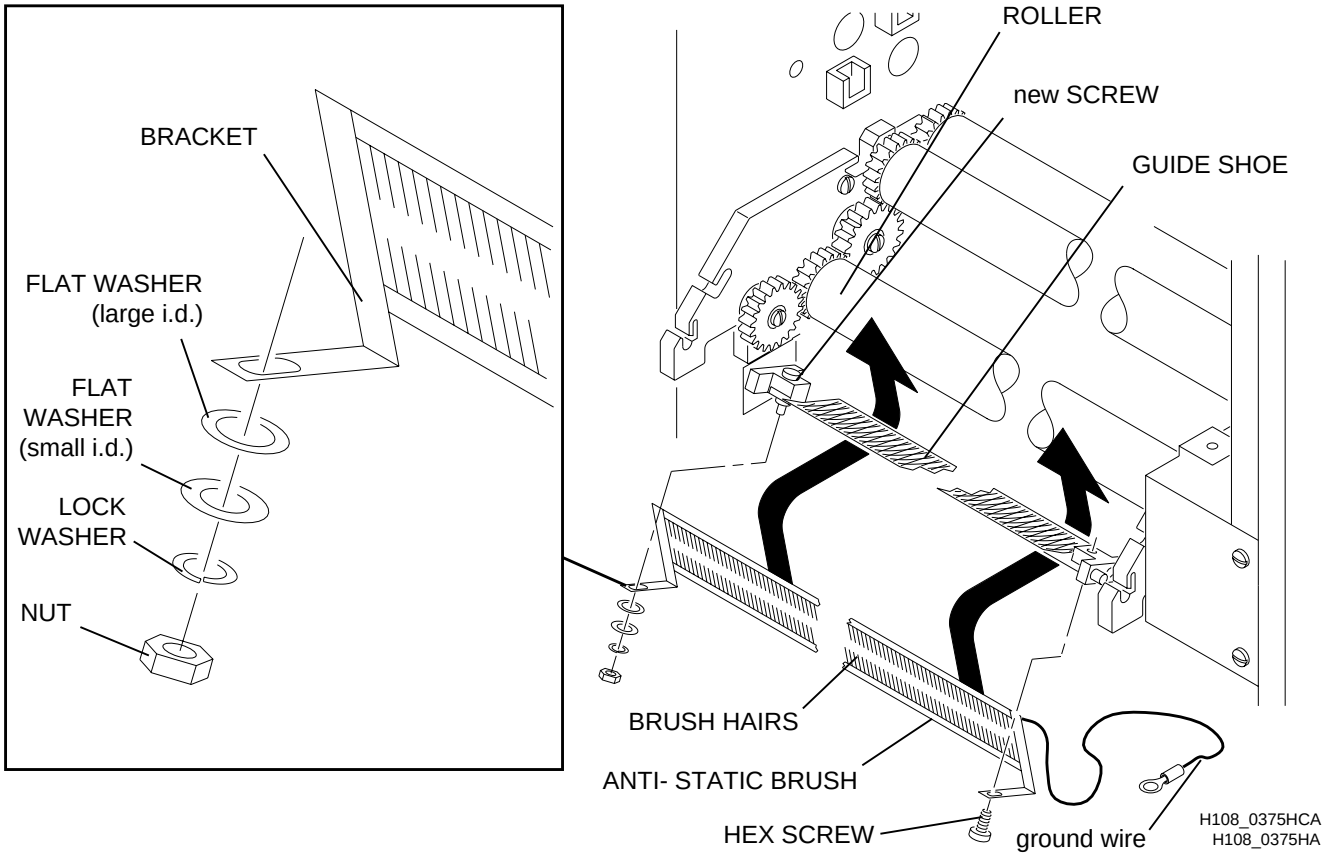

H108_0375HCA
H108_0375HA

[8] Install the **new** SCREW 852971 (#6-32 x 0.750.)

[9] Remove the HEX SCREW from the GUIDE SHOE.

[10] Place the ANTI-STATIC BRUSH assembly **between** the GUIDE SHOE and the ROLLER.

[11] Install the HEX SCREW.

[12] Install the following hardware on the new SCREW:

- FLAT WASHER 852614, **large** inner diameter (i.d.)
- FLAT WASHER 779051, **small** inner diameter (i.d.)
- LOCK WASHER 853093
- NUT 852620

Caution

- The ANTI-STATIC BRUSH assembly **must** be seated parallel to the GUIDE SHOE.
- The ANTI-STATIC BRUSH assembly **must not** make contact with the ROLLER.
- The BRUSH HAIRS **must not** be bent.
- To straighten bent BRUSH HAIRS, place your finger between the BRUSH assembly and the ROLLER. **Carefully**, move your finger across the BRUSH HAIRS.

[13] Check that the ANTI-STATIC BRUSH assembly is installed **correctly**.

[14] Install the SUPPORT BRACKET.

[15] Install the 2 EXIT ROLLERS you removed in Step 5.

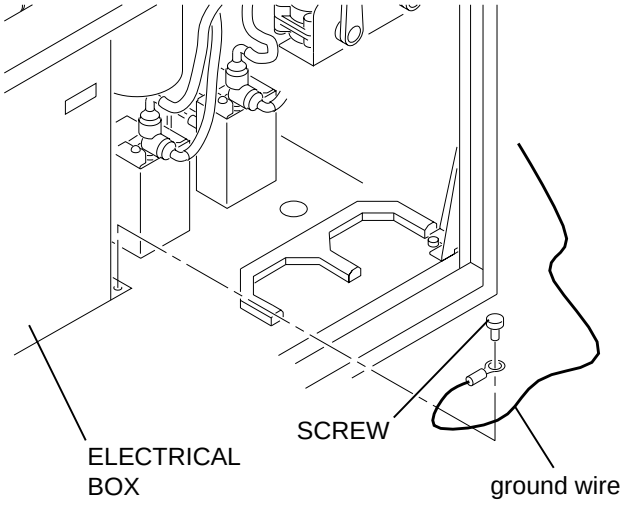

H108_0376ACA
H108_0376AA

[16] Fasten the ground wire to the SCREW on the ELECTRICAL BOX.

[17] Install the

- 8 ROLLERS
- 8 AIR TUBES

Warning

- Dangerous voltage.
- Moving parts.

[18] Connect the main power.

[19] Energize the PROCESSOR.

Caution

The ANTI-STATIC BRUSH **must not** interfere with the correct operation of the PROCESSOR.

[20] Check that the PROCESSOR operates correctly and that the films stack correctly.

[21] Disconnect the main power.

[22] De-energize the PROCESSOR.

[23] Install the

- RECEIVING END ACCESS PANEL
- DRYER PANEL

[24] Connect the main power.

[25] Energize the PROCESSOR.

Publication Change Table

Print Date	Pub. No.	ECO No.	Affected Pages	File Name	Notes
28MAR95	5B6348	2630-135	All	ii3228_2_28mar95.doc	Original printing

Kodak and **RA** are trademarks.

HEALTH SCIENCES DIVISION

EASTMAN KODAK COMPANY ● ROCHESTER, N.Y. 14650